 


Instruction Manual

Electric Patio Heater

ZHQ1314-KHD-RM-M

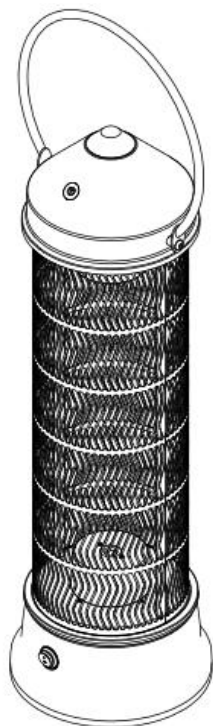

Please read these instructions carefully before using your new heater

Unpack the halogen heater making sure that all the items are present and that there are no components left in the box and that the heater head is free from any packing material.

Using the detailed drawing follow the steps to assemble your halogen heater.

Do not connect the halogen heater to the electrical supply until all the assembly is complete.

Do not connect the halogen heater to the electrical supply if any of the components or the power cord is damaged in any way.

If in doubt contact your supplier.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. **C**hildren shall not play with the appliance. **C**leaning and user maintenance shall not be made by children without supervision.

WARNING: This heater is not equipped with a device to control the room temperature. **Do not** use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

Children of less than 3 years should be kept away unless continuously supervised.

Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

 
CAUTION — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.

The heater must not be located immediately below an electrical socket-outlet.

Don't use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer or connected to a circuit that is regularly switched on and off by utility.

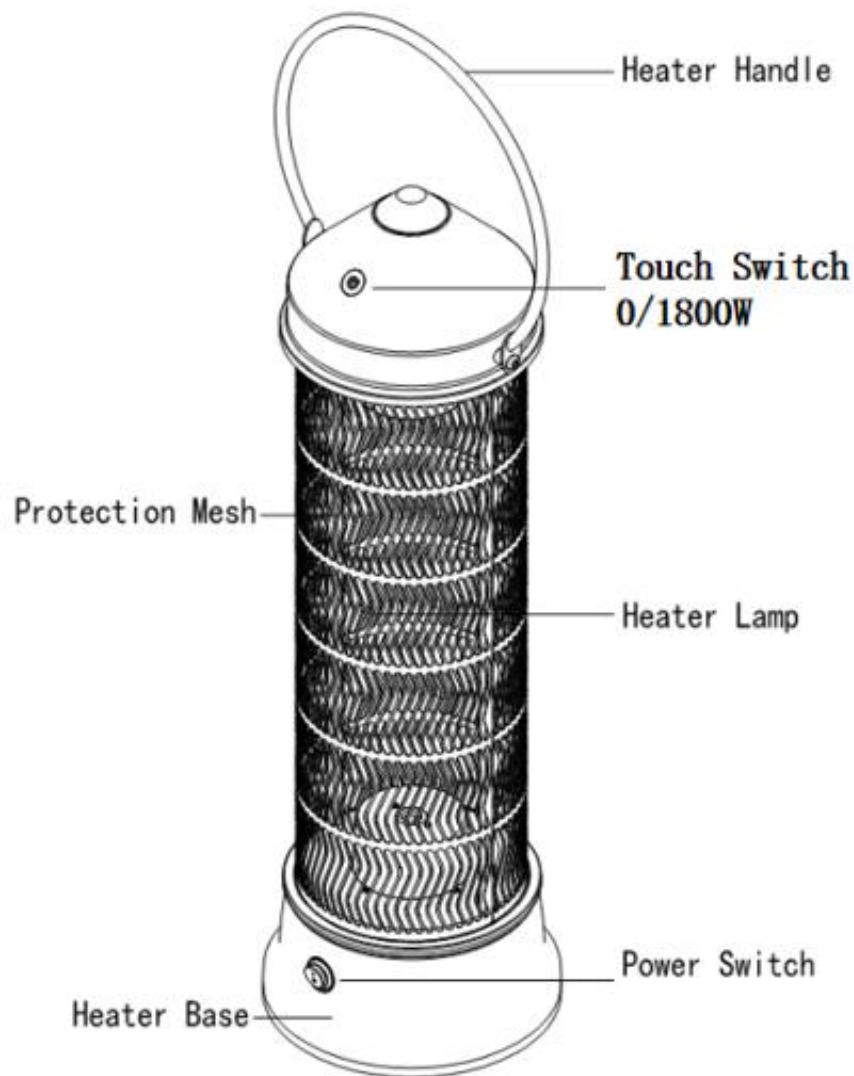

Caution

Only use the halogen heater on a firm solid horizontal area where all the feet on the base are in contact with the floor.

(**S**hould the heater be tilted or fall over the auto cut off switch will activate)

1. **S**ite the heater outside or in a large open area and well away from any obstructions such as branches or where the heater is near any objects that can be effected by heat, such as furniture, curtains or other inflammable objects (minimum distance 1 metre).
2. **Do not** use near bath tubs, wash areas or swimming pools.
3. **Do not** use in unventilated areas
4. **Do not** use where gas, petrol, paint or other inflammable goods are stored.
5. **Do not** push any items through, obstruct or cover the grill of the heater head.
6. **Do not** position immediately above or below an electrical socket.
7. **Do not** move when connected to an electrical supply and always wait for the patio heater to cool down before storing away.

8. **Do not** touch the heater head when in use.
9. **Do not** leave turned on and unattended especially when children and or animals are in the vicinity.
10. **T**he indication of the different positions of switches shall be visible from a distance of 1M.
11. **T**he Marking concerning covering shall be visible after the heater has been installed. **I**t shall not be placed on the back of portable heaters.
12. **T**he unit must be placed with the clearance of 100cm to the wall.
13. **T**he unit must be correctly installed according to the instructions.
14. **T**he unit must be securely placed on a horizontal and flat surface.
15. **T**he unit is at high temperature during operation. **I**t keeps hot for a period after shut down. **P**otential danger would occur when touching it during this period.
16. **Don't** place the unit closed to curtain and/or other flammable objects. **O**therwise there will be a danger of catching fire.
17. **Don't** cover the unit with anything during operation or a short time after it's shut down.
18. **Don't** wrap the power supply cord on the unit.
19. **T**he unit must be handled with care, and avoid vibration or hitting.
20. **T**he unit must be securely grounded during operation.
21. **I**f the unit gets damaged, it must be repaired by professional electricians.
22. **W**hen the power supply cord is damaged, it must be replaced by authorized agent or other professional people to avoid danger.
23. **T**he unit must not be positioned under a socket.
24. **W**hen assembling, keep clear from any board or flammable material.
25. **T**he unit must be supervised by adults if it's used by a child.
26. **T**he unit is for household use only. **I**t is not safe to use on a building site, greenhouse, barn or stable where there's flammable dust.
27. **T**he head of the unit is at high temperature during operation.
Unplug the unit and wait till it cools before cleaning.

28. **Don't** use this unit in place where causticity or volatile air exists, i.e. dust, steam, gas, etc.
29. **Don't** use this unit as a cloth drier or towel drier.
30. **Don't** use this unit as a sauna heater.
31. **Don't** use this unit as a room heater.
32. **Don't** use this unit in place of animal propagating and raising.
33. **Don't** immerse this unit into water for cleaning.
34. **The** unit should be plugged in a socket, which is easily visible and reachable.
35. **One** dark point may exist on the surface of the heating elements during the first few minutes after it is turned on.
This is normal, and will not affect the performance of the unit.
36. **The** heater must not be located immediately below a socket-outlet.
37. **Do not** use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
38. **WARNING!** In order to avoid overheating, do not cover the heater

39. **Do not** use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exist if the heater is covered or positioned incorrectly.
40. **The** appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been supervision or instruction.
41. **DO NOT COVER! Don't** cover the unit with anything during operation or a short time after it's shut down.
42. **Do not** use the heater with a programmer, timer or any other device that switches the heater on automatically.



 
This warning symbol indicates that the surface is hot and caution is required.



This warning symbol indicates that the heater should not be covered.

1. Assembling Process

Step 1: Fix the heater on the floor. Bore three holes in the floor, fix the heater by three wedge bolts on the floor tightening the screws by spanner.

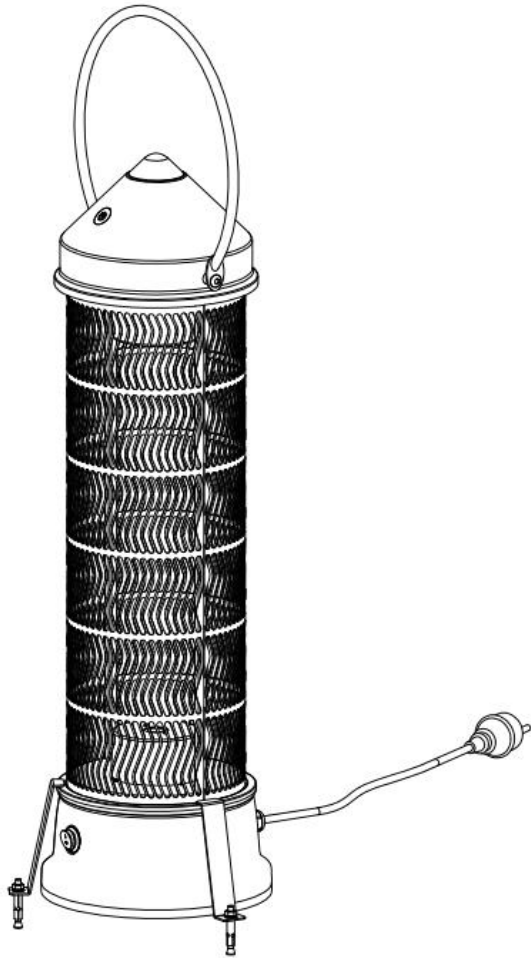

Complete

Operation

 
Connect the power cable to a 13 amp supply that is located in a safe, dry area.

Press the power switch on the heater when the plug had been connected.



Press the touch switch one time to operate the heater on 1500W.

Press the touch switch second time for off.

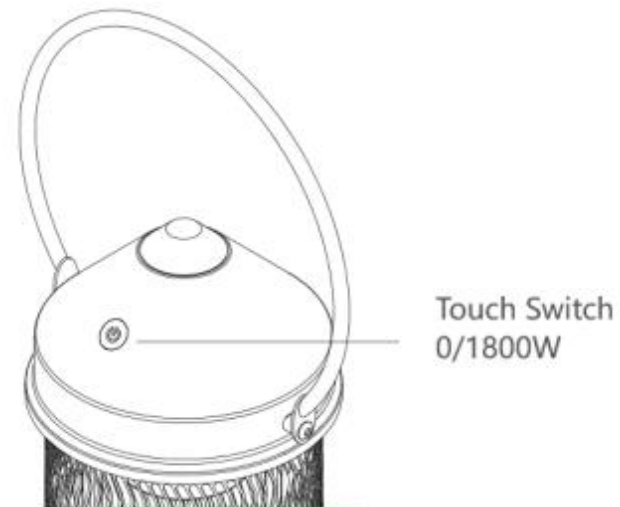

- Although the patio heater is shower proof, do not use when raining or in wet conditions.
- Always disconnect the power cable from the electrical supply, when the patio heater is not in use.

Technical specification

- Power supply 220-240V 50-60Hz
- Wattage 1800W
- Insulation class I

Care and maintenance

- When disconnected from the electrical supply, clean the outside of the patio heater with a damp cloth. Never use corrosive or solvent cleaners or immerse in water.
- Any maintenance or repairs including replacing the halogen tube should only be carried out by a qualified electrician or by a recommended service center.

STORAGE

If the heater will not be used for a long period of time, store it in a cool, dry location when not in use. To prevent dust and dirt build-up, use the original packaging to repack the unit.

TROUBLE SHOOTING

If the heater will not operate, please check the following before seeking repair of service:

- Check if the power cord is plugged into an electrical outlet, if not plug in.
- Check if electricity to the main fuse is working.
- Make certain the power switches are turned on. If not, choose a setting.

WEEE



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information please contact the local authority or your retailer where you purchased the product.