





ASSEMBLY INSTRUCTION

Item Number:WF318797 / WF318798

Upholstered Bed 160x200

TIPS



1. This product is divided into 2 parcels for delivery. They may not arrive at the same time. Please wait patiently.
2. Please read the instructions fully before assembly. These instructions include important information which could ensure correct assembly. We have been working on providing high quality products for you. However, in the rare instance that your product is defective, missing parts or there are some issues, please don't hesitate to contact our customer service to submit parts requirements, assembly suggestion, or warranty claims, and we will give the best solution as soon as possible. If necessary, we need you to provide some more clear pictures of the issue.
3. Insert the screws in holes and tighten the screws, but not too tight, 70%~80% is ok, finally tighten all the screws. If some issues happened that some screws can not target to the hole or some parts are difficult to install, please adjust the tightness of the screws.
4. 2 people are recommended to finish

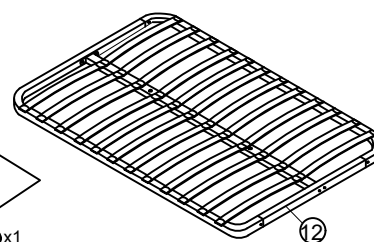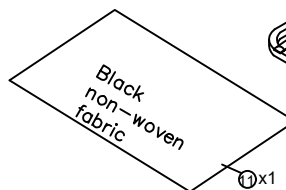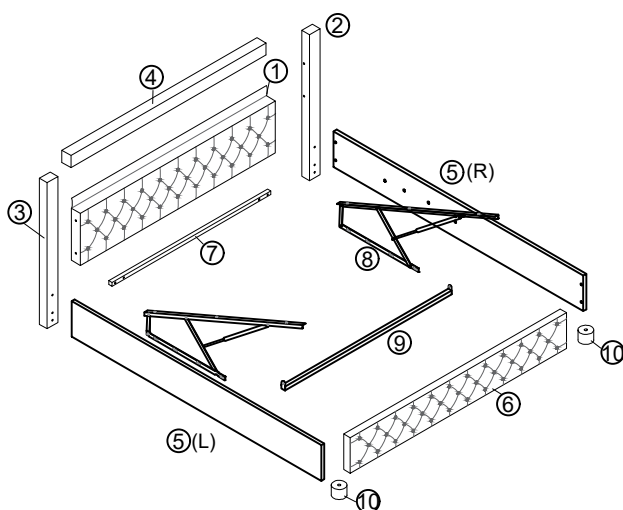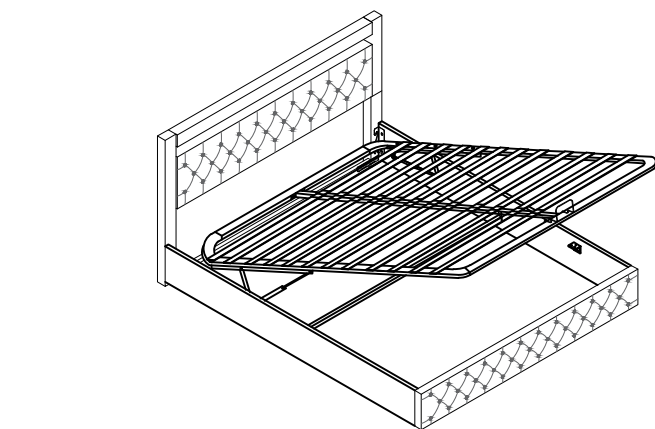








Parts List			Hardware List		
NO	ITEM	QTY	NO	ITEM	QTY
1	Head board	1	A	Allen Key	1
2	Side head board	1	B	Bolts (M8x45mm)	20
3	Side head board	1	C	Washer	4
4	Head board bar	1	D	Bolts (M8x18mm)	28
5	Side rails	2	E	Nuts	14
6	Foot board	1	F	Nails (M4x25mm)	12
7	Head board cross bar	1	G	Nails (M4x50mm)	2
8	Gas lift	2	H	Nuts	2
9	Cross bar	1	I	Bolts (M6x25mm)	10
10	Legs	2	J	Spanner	1
11	Non woven fabric	1	K	Hinge	4
12	Slat frame	1	L	Plastic support	4
			M	Middle legs	2
			N	Middle slats	12
			O	End slats cap	24
			P	Stopper	1
			Q	Three hole iron	4
			R	Led adapter	1
			S	Color controller	1

Part List

WF318797

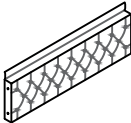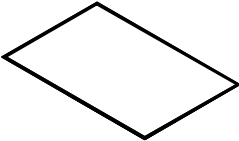1  Head board-1pc	2  Head board legs-1pc	3  Head board legs-1pc
4  Head board bar-1pc	8  Gas lift-2pcs	11  Non woven fabric-1pc


Hardware List+WF318798

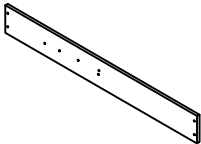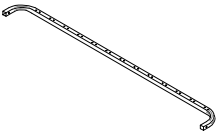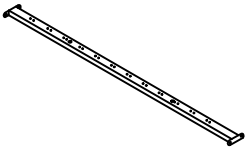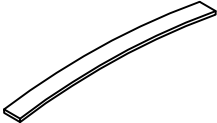5  Side rails -2pcs	6  Foot board -1pc	7  Head board cross bar -1pc
9  Cross bar -1pc	10  Legs -2pcs	12.1  Metal frame cross bar-2pcs
12.2  Metal frame side bar-2pcs	12.3  Metal frame middle bar-1pc	12.4  Slat-24pcs

Attention: Do not tighten the screws before completing the entire installation. If you have any difficulty with the installation process, please feel free to contact us.

Step 1x2


Fix the Headboard legs ②/③ to the headboard ① With Bolts B and Washers C by using Allen key A.

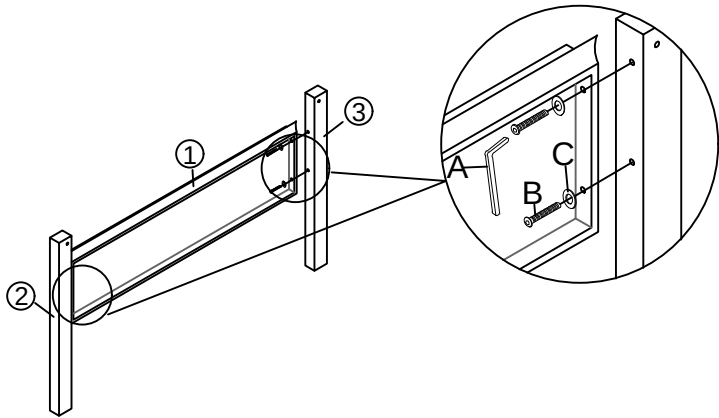

A Allen Key x1	B Bolts x 4	C Washer x 4
	 M8X45mm	

Step 2x2


Fix the Headboard bar ④ to the Side head board ②and③ with Three hole iron Q and Bolts D by using Allen key A,then stick the back cover.

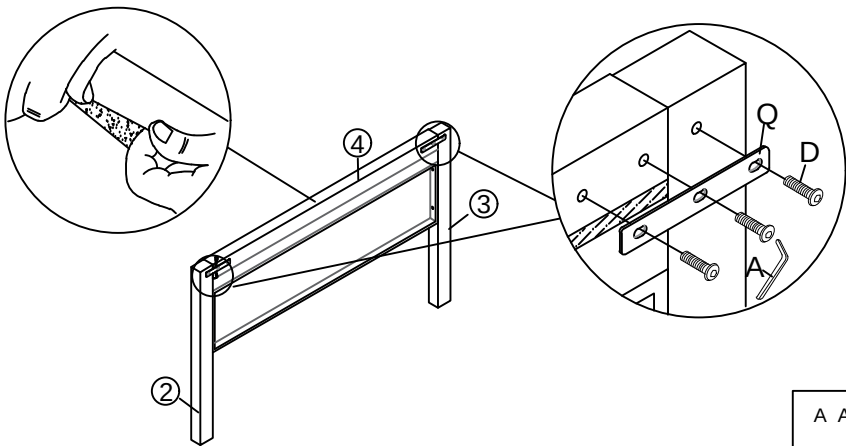

A Allen Key	D Bolts x 6	Q Three hole iron x2
	 M8X18mm	

Step 3


Fix the Headboard cross bar ⑦ to the Headboard legs ②/③ with Bolt D and Three hole iron Q by using Allen key A.

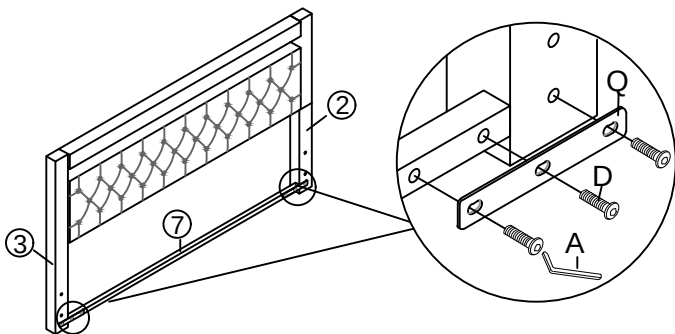

A Allen Key	D Bolts x 6	Q Three hole iron x2
	 M8X18mm	

Step 4


Fix the side rails ⑤ to the side head board legs ②, ③ and foot board ⑥ with Bolts D and hinges K by using Allen key A

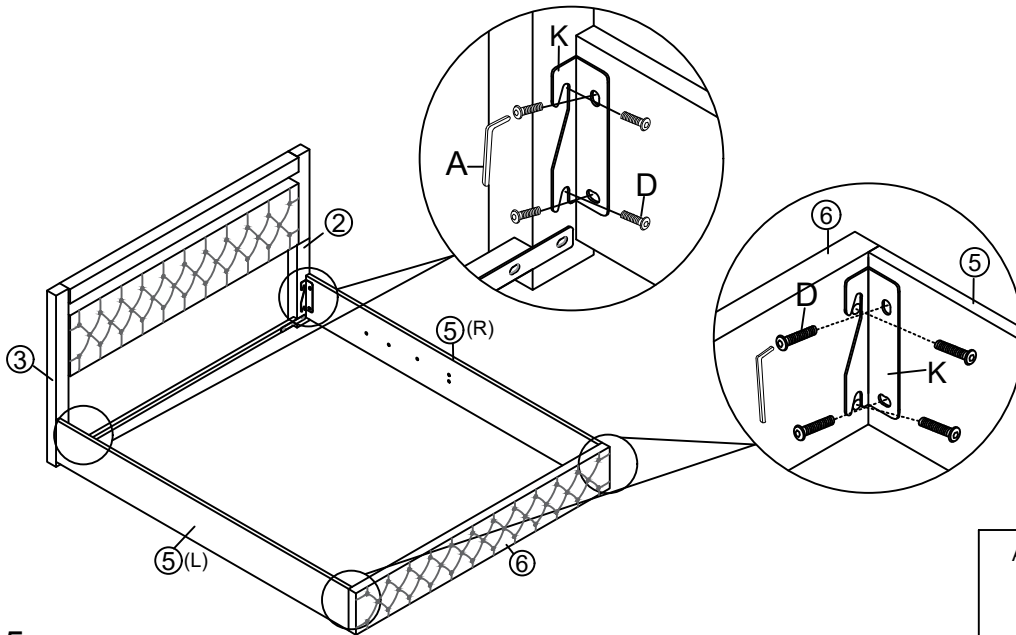

A Allen Key	D Bolts x 16 M8X18mm	K Hinge x4

Step 5


Fix the plastic support L to the side rails ⑤ and footboard ⑥ with nails F by using electric drill or screw driver

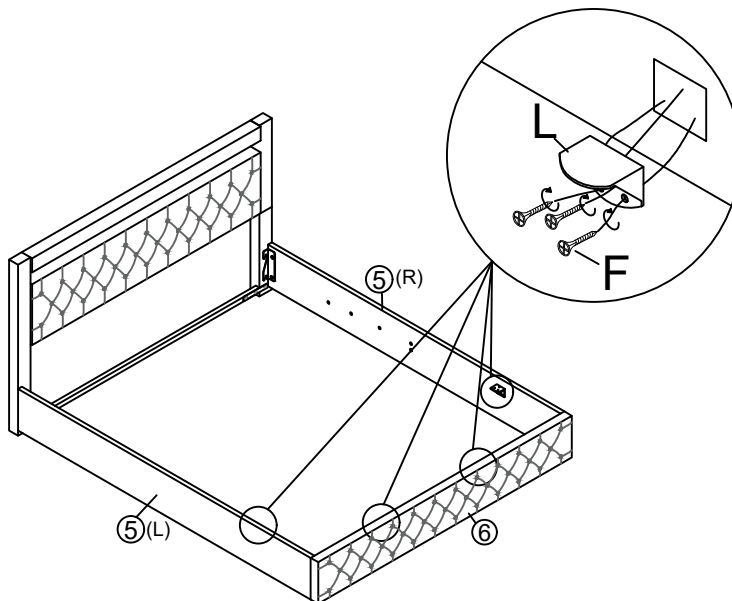

F Nails x12 M4X25mm	L Plastic support x4

Step 6


Fix the cross bar ⑨ to the side rails ⑤ with bolts I by using electric drill or screw driver.

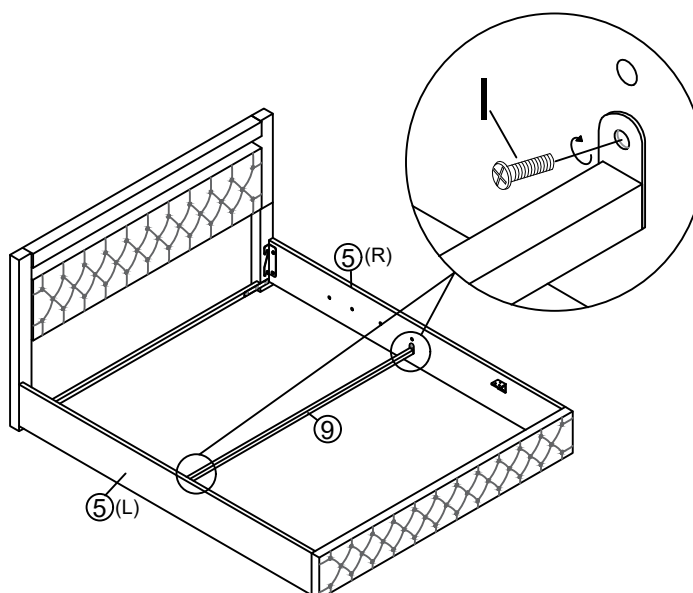

I Bolts x 2 M6X25mm

Step 7 x2

Fix the gas lifts ⑧ to the side rails ⑤ with bolts I by using electric drill. fix the gas bar to the gas lifts ⑧ with nuts H.

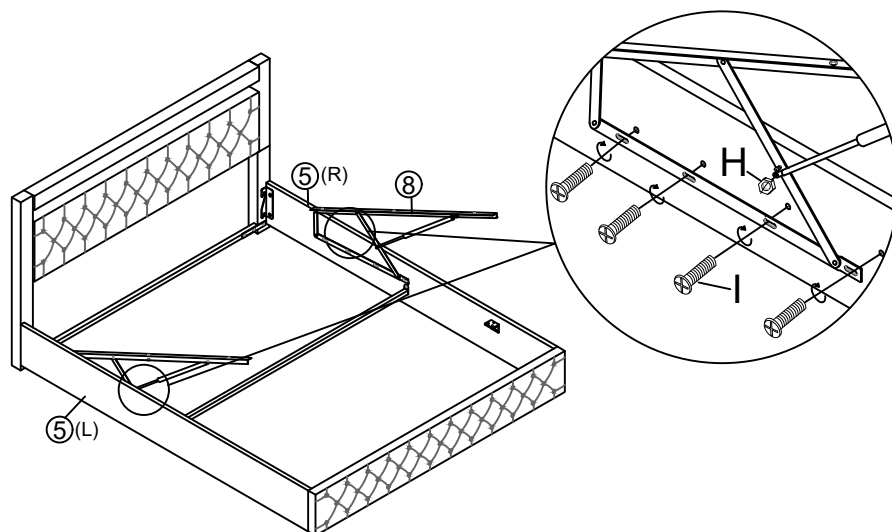


H Nuts x2	I Bolts x 8
	
	M6X25mm

NOTICE:

The hole on the gas list is oval, please make sure that the installation positions on the left and right are roughly the same. If you accidentally install the gas lift one side to the front and the other to the back, which affects your use, you can write it down and reinstall it.


Step 8

Stick the black non-woven fabric ⑪ to the bottom of bed

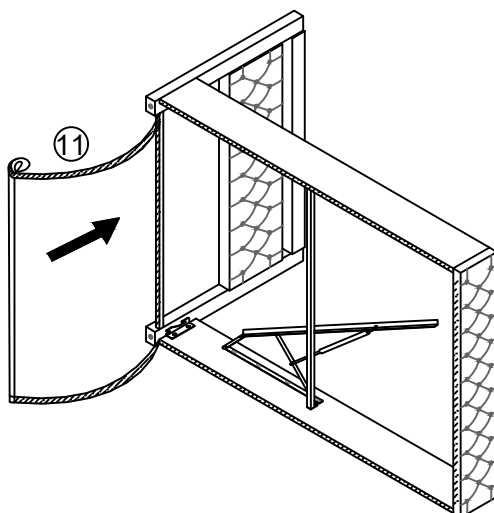

Step 9

Fix the legs ⑩ to the footboard ⑥ with nails G by using electric drill or screw driver

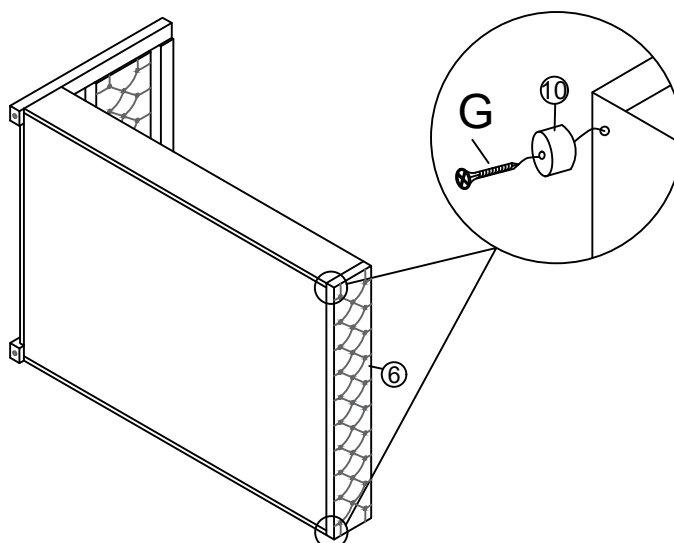


G Nails x2

M4X50mm


Step 10

Assemble the slats frame with bolts B and nuts E by using Spanner J

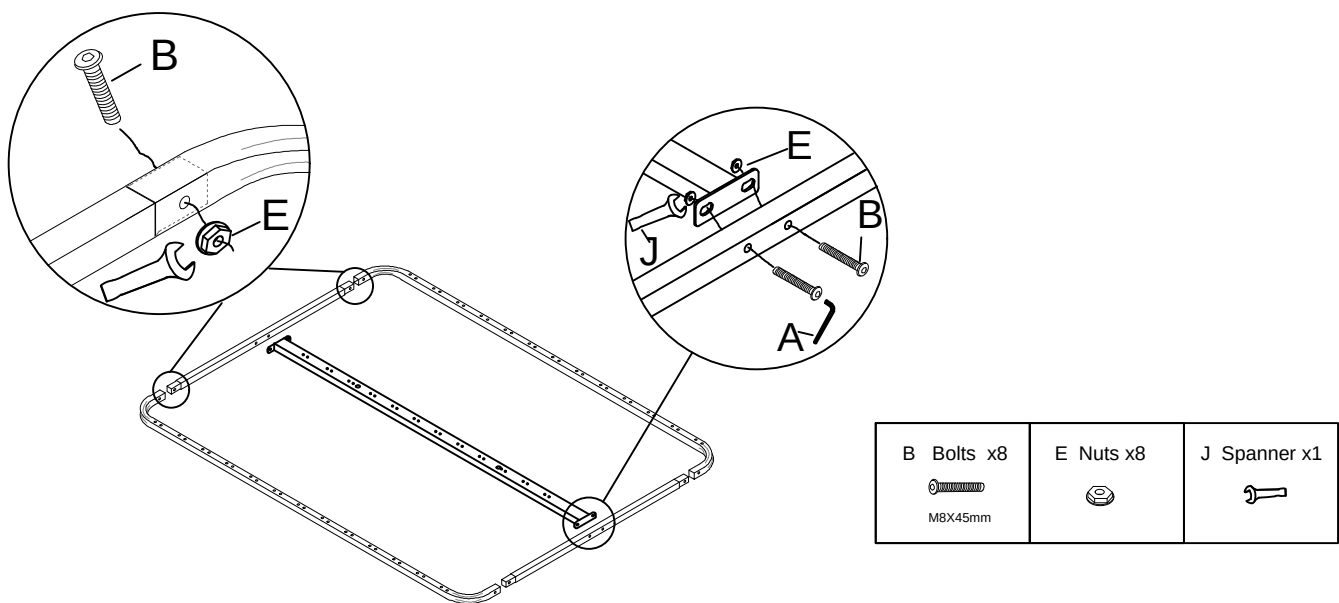


Step 11 x2

Fix middle legs M to the middle bar with bolts B by using Allen key A

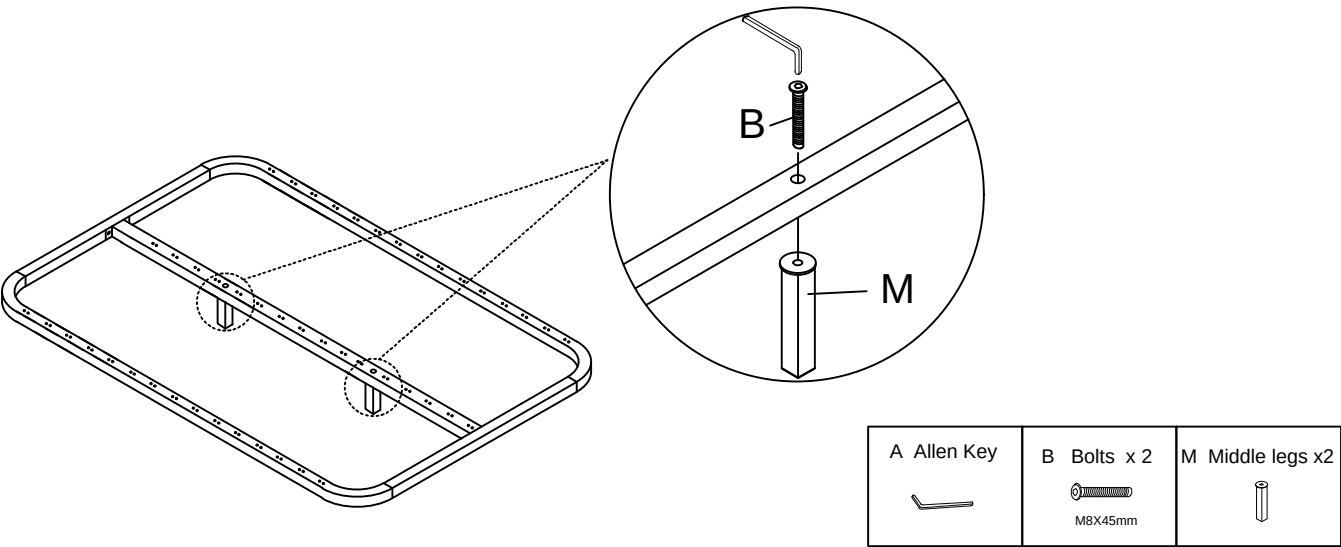


Step 12

Assemble the slats into the assembled slats frame with middle slats cap N and end slats cap O

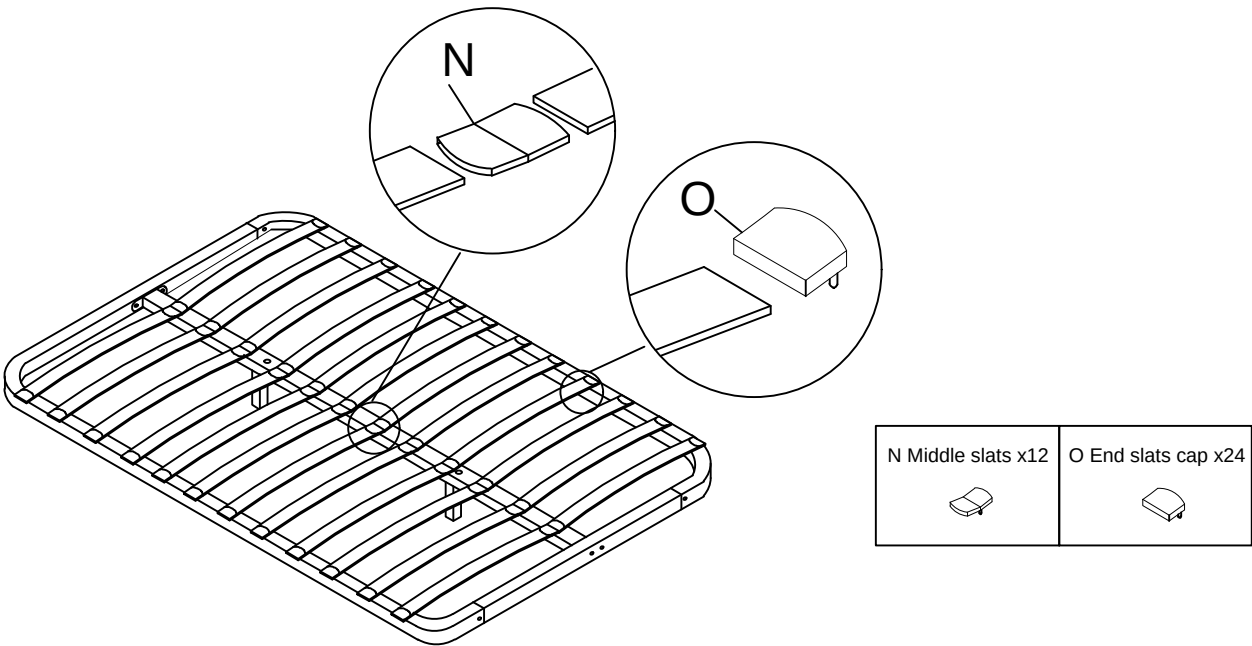

Step 13

Assemble the slats frame ⑫ to the gas lifts ⑧ with bolts B and nuts E, put the stopper P in the end of the slat frame.

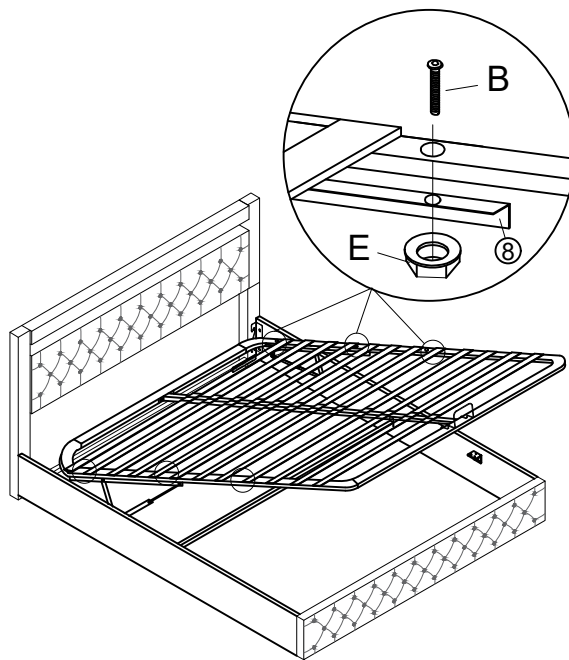


B Bolts x6  M8X45mm	E Nuts x6 	P Stopper x1 
--	--	---


Step 14

Put the color controller S to the light line, please notice that → ←.

Fix the Led adapter R to the Color controller S. Finally connect the power, and enjoy the bed.

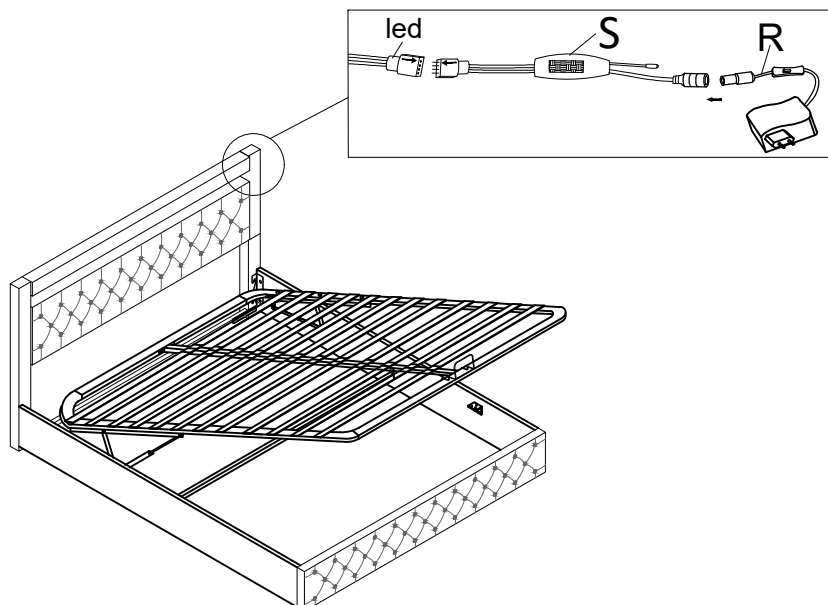


R Led adapter x1 	S Color controller x1 
---	--

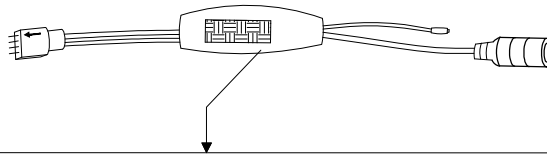

HINWEIS:

Hier können Sie den QR-Code scannen und eine App herunterladen, mit der Sie die Farbe des Lichtstreifens wie mit einer Fernbedienung steuern können. Wenn Ihr Telefon über die App Musik abspielt, ändert sich auch die Farbe des Lichtstreifens entsprechend der Stärke der Musik

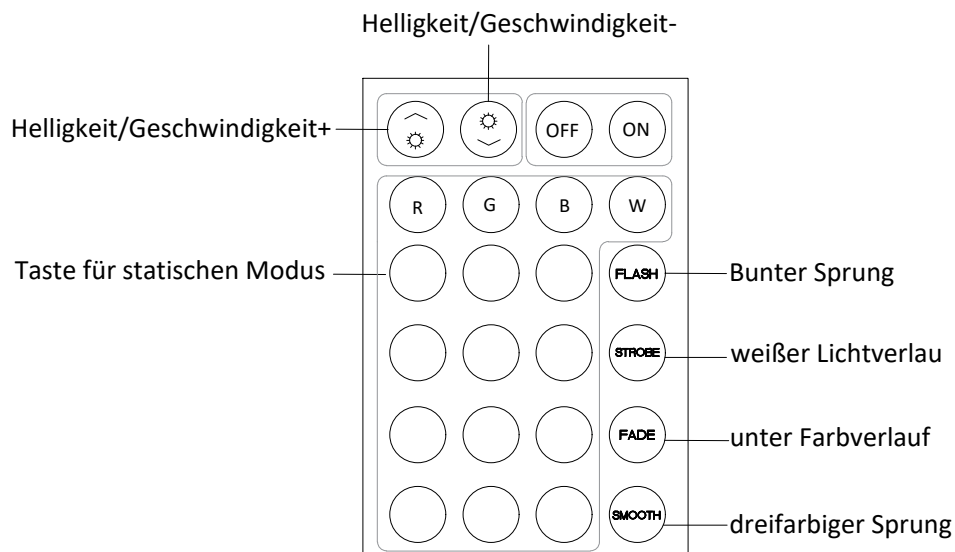

HINWEIS:

Wenn Sie die Fernbedienungsplatine verwenden, um die Farbe des Lichts zu steuern, entfernen Sie bitte zuerst die durchsichtige Plastikkarte und achten Sie dann darauf, die Fernbedienung auf den Farbegler Q zu richten.