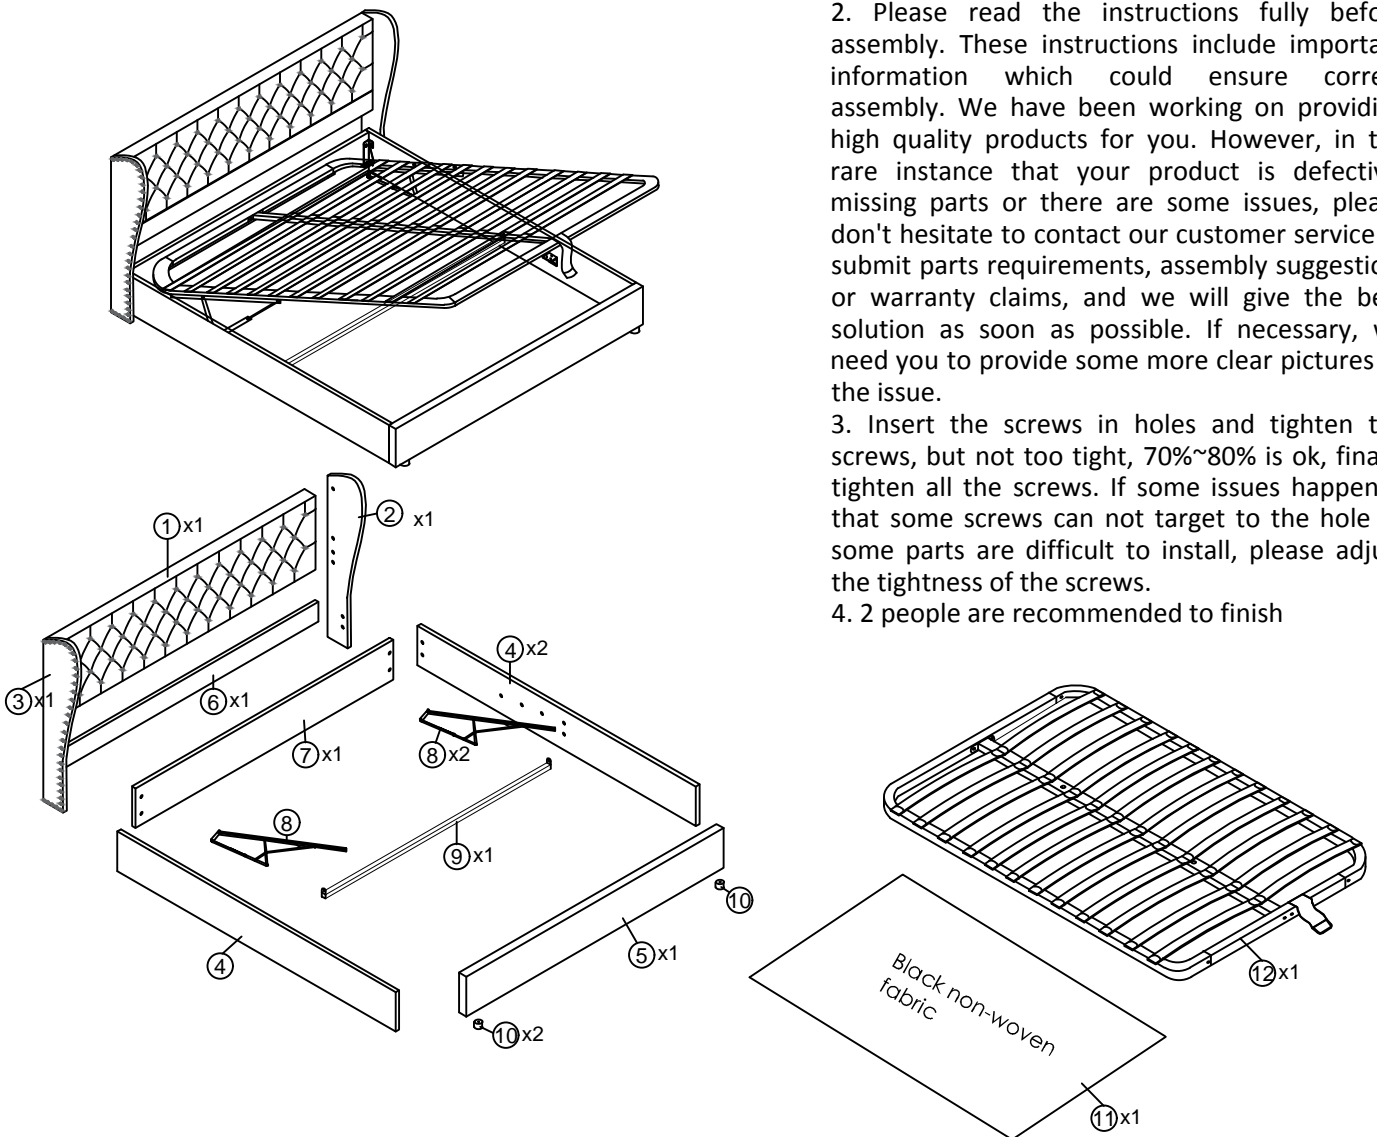


# ASSEMBLY INSTRUCTION

## TIPS

1. This product is divided into 2 parcels for delivery. They may not arrive at the same time. Please wait patiently.
2. Please read the instructions fully before assembly. These instructions include important information which could ensure correct assembly. We have been working on providing high quality products for you. However, in the rare instance that your product is defective, missing parts or there are some issues, please don't hesitate to contact our customer service to submit parts requirements, assembly suggestion, or warranty claims, and we will give the best solution as soon as possible. If necessary, we need you to provide some more clear pictures of the issue.
3. Insert the screws in holes and tighten the screws, but not too tight, 70%~80% is ok, finally tighten all the screws. If some issues happened that some screws can not target to the hole or some parts are difficult to install, please adjust the tightness of the screws.
4. 2 people are recommended to finish

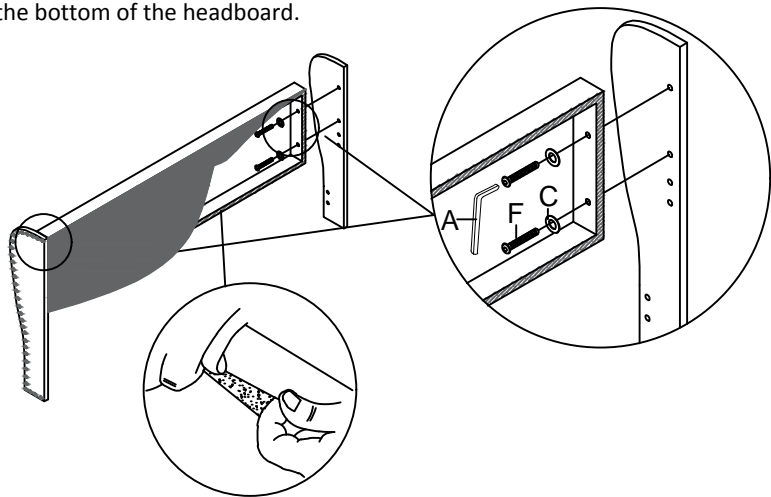





Parts List			Hardware List		
NO	ITEM	QTY	NO	ITEM	QTY
1	Head board	1	A	Allen Key	1
2	Side head board	1	B	Bolts (M8x45mm)	20
3	Side head board	1	C	Washer	4
4	Side rails	2	D	Bolts (M8x25mm)	20
5	Foot board	1	E	"7" Connector	2
6	Cross board	1	F	Bolts (M8x40mm)	4
7	Storage box board	1	G	Nails (M4x50mm)	2
8	Gas lift	2	H	Hinge	4
9	Cross bar	1	I	Nails (M4x25mm)	12
10	Legs	2	J	Plastic support	4
11	Non woven fabric	1	K	Bolts (M6x30mm)	10
12	Slat frame	1	L	Nuts	2
			M	Nuts	14
			N	Spanner	1
			O	Middle legs	2
			P	Middle slats	12
			Q	End slats cap	24
			R	Pull tab	1

Attention: Do not tighten the screws before completing the entire installation. If you have any difficulty with the installation process, please feel free to contact us.

Step 1x2

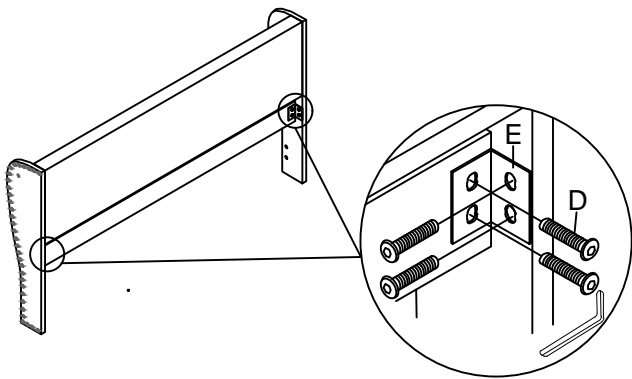
Fix the sideboard ②/③ To the headboard ① With bolts F and Washers C by using Allen key A, then stick the black non woven fabric to the bottom of the headboard.





A Allen Key x1	C Washer x 4	F Bolts x 4 M8X40mm
		

Step 2x2

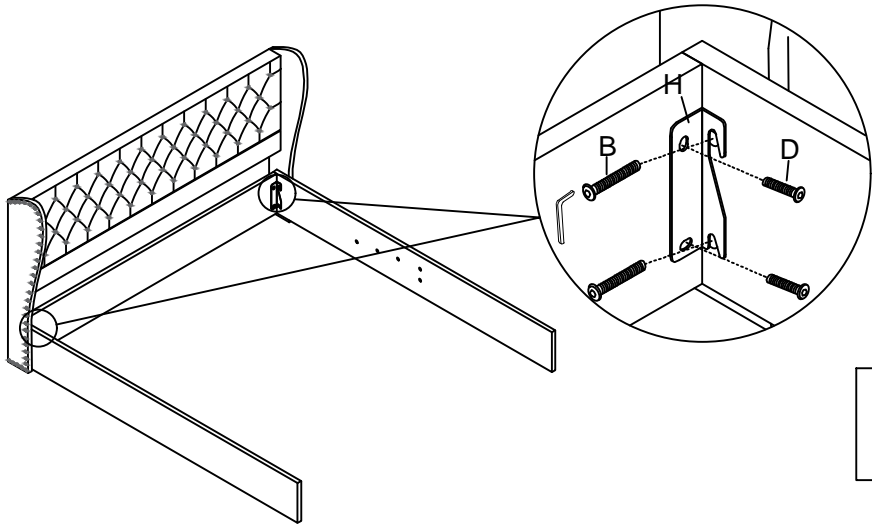
Fix cross board ⑥ to the side head board ② and ③ with "7" connector E and bolt D by using Allen key A







A Allen Key	E "7"Connector x2	D Bolts x 8 M8X25mm
		

Step 3 x2

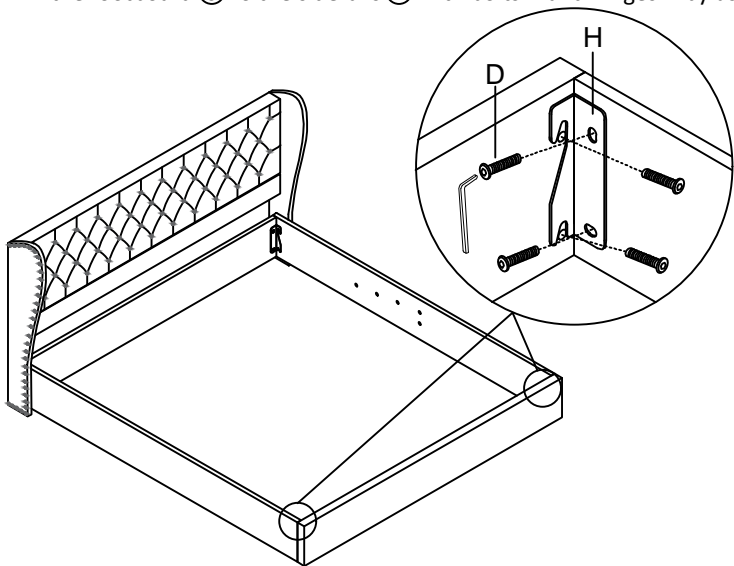
Fix the side rails ④ To the side headboard ② and ③ With bolts B, Bolts D and hinges H by using Allen key A



A Allen Key	B Bolts x 4 M8X45mm	D Bolts x 4 M8X25mm	H Hinge x2
			

# Step 4 x2

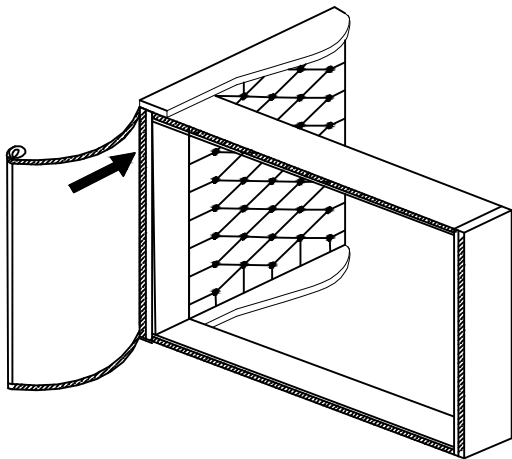
Fix the footboard ⑤To the siderails ④With bolts D and hinges H by using Allen key A



Allen Key	D Bolts x 8 M8X25mm	H Hinge x2
		

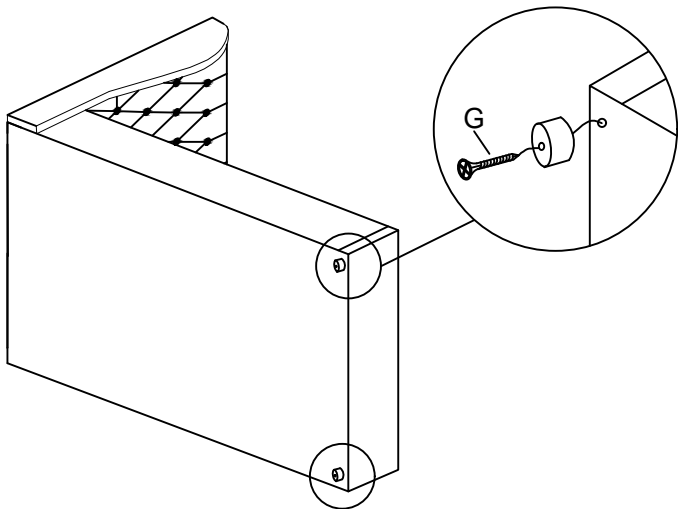
# Step 5


Stick the black non-woven fabric ⑪To the bottom of bed



# Step 6 x2

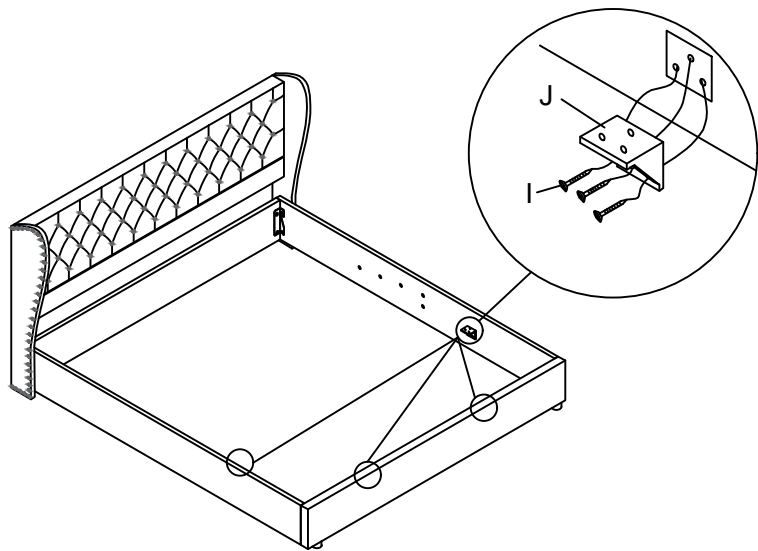
Fix the legs ⑩with nails G by using electric drill or screw driver






G Nails x2 M4X50mm	
-----------------------	---

Step 7

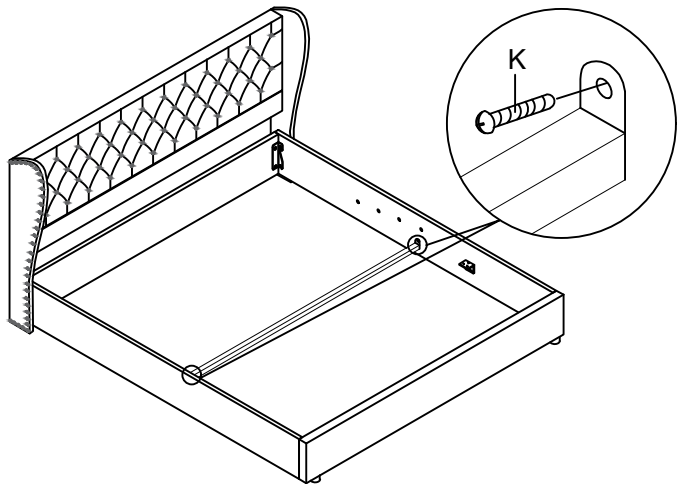
Fix the poly supports J to the side rails ④ and footboard ⑤ with nails I by using electric drill or screw driver





I Nails x12  M4X25mm	J Plastic support x4 	
---	---	---

Step 8

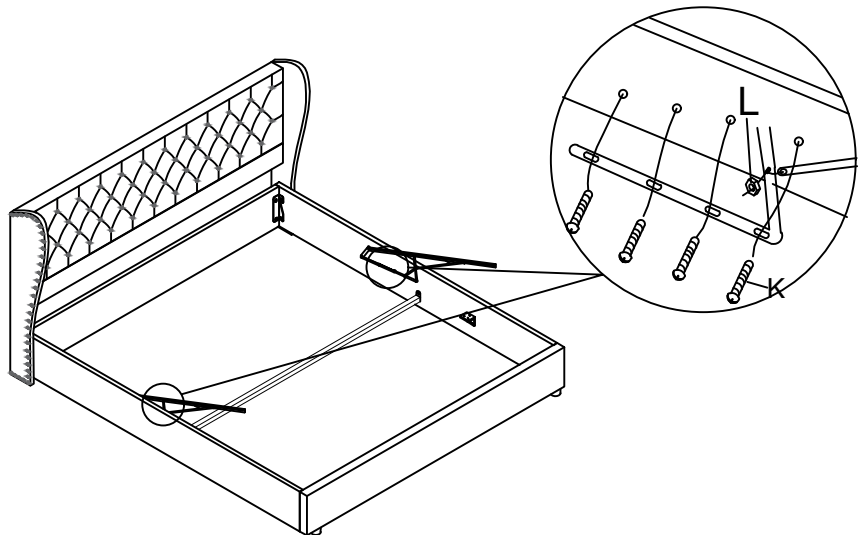
Fix the cross bar ⑨ to the side rails ④ with bolts K by using electric drill or screw driver.






K Bolts x 2  M6X30mm	
---	---

Step 9 x2

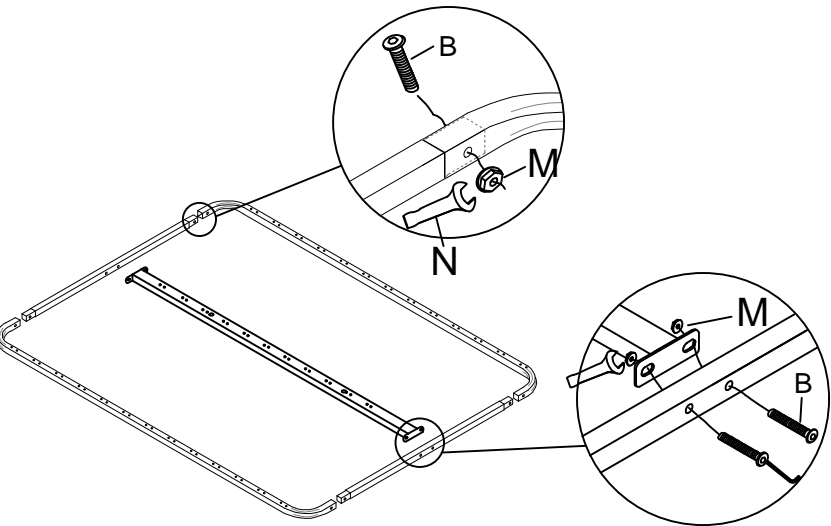
Fix the gas lifts ⑧ to the side rails ④ with bolts K by using electric drill. fix the gas bar to the gas lifts ⑧ with nuts L






L Nuts x2 	K Bolts x 8  M6X30mm	
--	---	---

Step 10

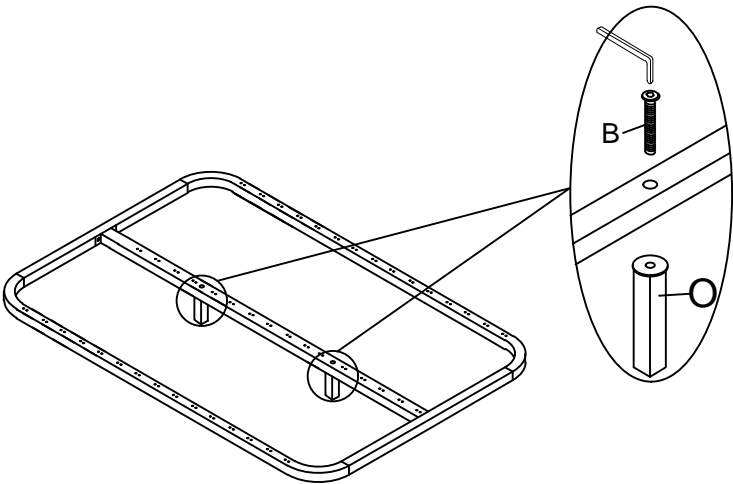
Assemble the slats frame with bolts B and nuts M by using Spanner N






B Bolts x8	M Nuts x8	N Spanner x1
		
M8X45mm		

Step 11x2

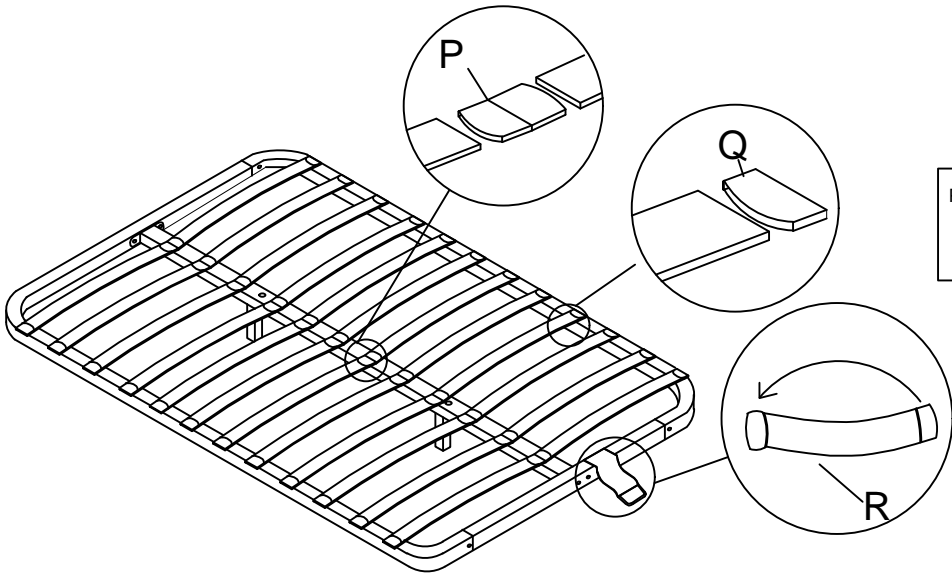
Fix middle legs O to the middle bar with bolts B by using Allen key A






Allen Key	B Bolts x 2	O Middle legs x2
		
	M8X45mm	

Step 12

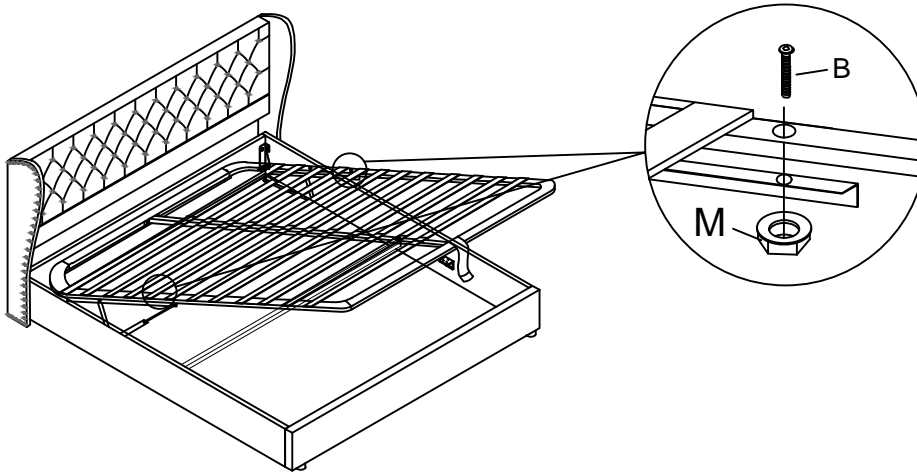
Assemble the slats into the assembled slats frame with middle slats cap P and end slats cap Q put the pull tad R in the end of the slat frame





P Middle slats x12	Q End slats cap x24	R Pull tab x1
		

## Step 13

Assemble the slats frame ⑫ to the gas lifts ⑧ with bolts B and nuts M then assemble is finished, now please tighten all hard ware and enjoy the bed



B Bolts x6  M8X45mm	M Nuts x6 
--	--